

Isolating units not in use (Monika 1.5)

There may be instances whereby you will need to isolate (or disable monitoring) for a unit. One reason for this may be that the unit is to be repaired and needs to be turned off at the moment until this work is complete. To avoid excess alarms, isolating will effectively stop the monitoring on that unit until such time it is ready to be used again.

This is a simple process that will be explained below.

PLEASE NOTE: It is very important that the unit is isolated **BEFORE** switching it off.

Process

- Log into your Monika system as normal.
- Left click the “**Live View**” Box to show you a list of units.
- Find the Box for the unit you wish to “**Isolate**”.
- **Left Click** the “Connected” dropdown box on the Right of the Unit’s Horizontal temp gauge.
- Select “**ISOLATED**”, the indicator should now alter to show this change.
- You can now turn off the unit.

Once this is done, there will not be any monitoring of the isolated unit and thus no alerts. Once whatever work or situation is resolved simply follow this process in reverse to “Un-Isolate” the unit.

If you require any help on this please call 01664 420 022.